

Keep this cab card with the vehicle at all times. Present to Law Enforcement personnel when requested.

**CERTIFICATION:**


Vista Track GPS certifies that this system satisfies all requirements of the United States Department of Transportation (USDOT) Federal Motor Carrier Safety Administration (FMCSA) specifications for automatic on-board recording devices as found in 49 CFR § 395.15. Vista Track GPS is not responsible for driver entry error or systems not maintained in proper working order.

**INSPECTOR:**

When you request to see a driver's logs, you can expect the driver to hand you this quick reference card and provide you the display unit for you to see. You can view log data in a graph or detailed view. Note: Drivers are responsible for verifying the accuracy of the logs.

## Driver Overview Screen





- 1 This screen displays Hours of Service information for the driver name displayed on the top of the screen.
- 2 The *Available Drive Time* dial will show the available drive time for this Driver based on Hours of Service Rules.
- 3 By clicking the down arrow, total hours available in each of the major Hours of Service rules is displayed.
- 4 Team drivers are identified by tiles. Selecting the tiles switches between drivers.
- 5 The active driver is identified under *Current Status* with a 'ON(D)' designation.

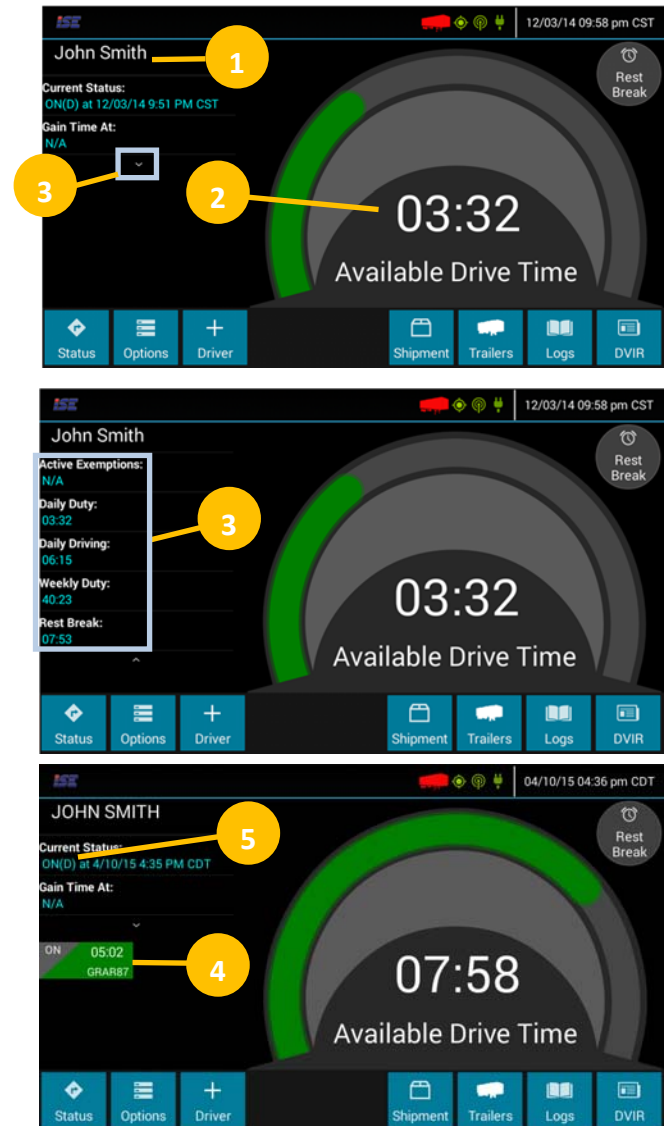

**Warning** Driver—Do not use while vehicle is in motion.

# Viewing Driver Logs

- 1 Tap the 'Logs' button on the *Driver Overview* Screen to view the Driver's Logs.
- 2 The Driver's Logs are displayed in a grid view. The name of the Driver and date is displayed on the top of the display. All duty status changes that occurred during the day are displayed in the grid.
- 3 To view the previous day or next day, tap on the left or right arrows.
- 4 To view the details of the duty status changes tap on the 'Log' button.
- 5 The 'Log Events' on the left side provides a chronological view of the drivers log events. Swipe up or down to scroll through the content.
- 6 The 'Log Details' on the right side provides details regarding vehicles, trailers, shipment and co-drivers, and miles driven. Swipe up or down to scroll through the content.
- 7 To access the motor carrier information tap the 'Office' button.
- 8 The office information includes the name of the carrier, address and driver home terminal.

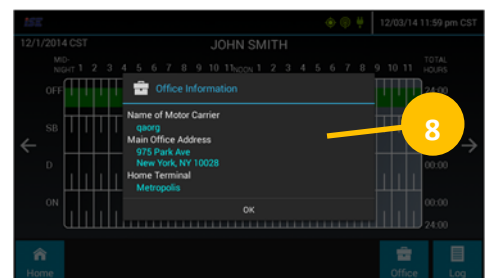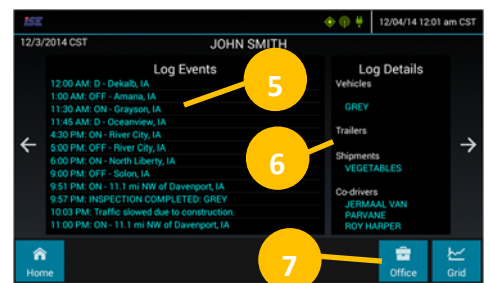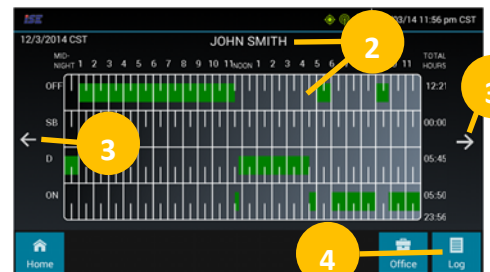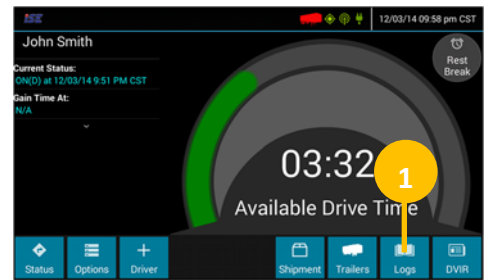

- 395.15 requires synchronization between the vehicle engine and mobile device.
- This synchronization occurs via a J1939 connection between the mobile device and On-Board Computer via a 4000HDV (black box). This connection allows eFleetSuite to track the drivers Hours of Service records.
- If a driver sees the 'OBC Failure Use Paper Logs' message then the driver must switch to using paper logs until the system is functioning again.
- When a driver is actively connected to the black box, the connection icon will be shown as green in the top right corner. Driver is responsible for ensuring the connection icon is green before driving the vehicle.